


# FIESTA MK8 KIT

OFFSIDE  
PARTS

NEARSIDE  
PARTS



**REMOVE THE 2 X 10MM BOLTS  
AND FIT A WASHER OVER  
EACH HOLE**

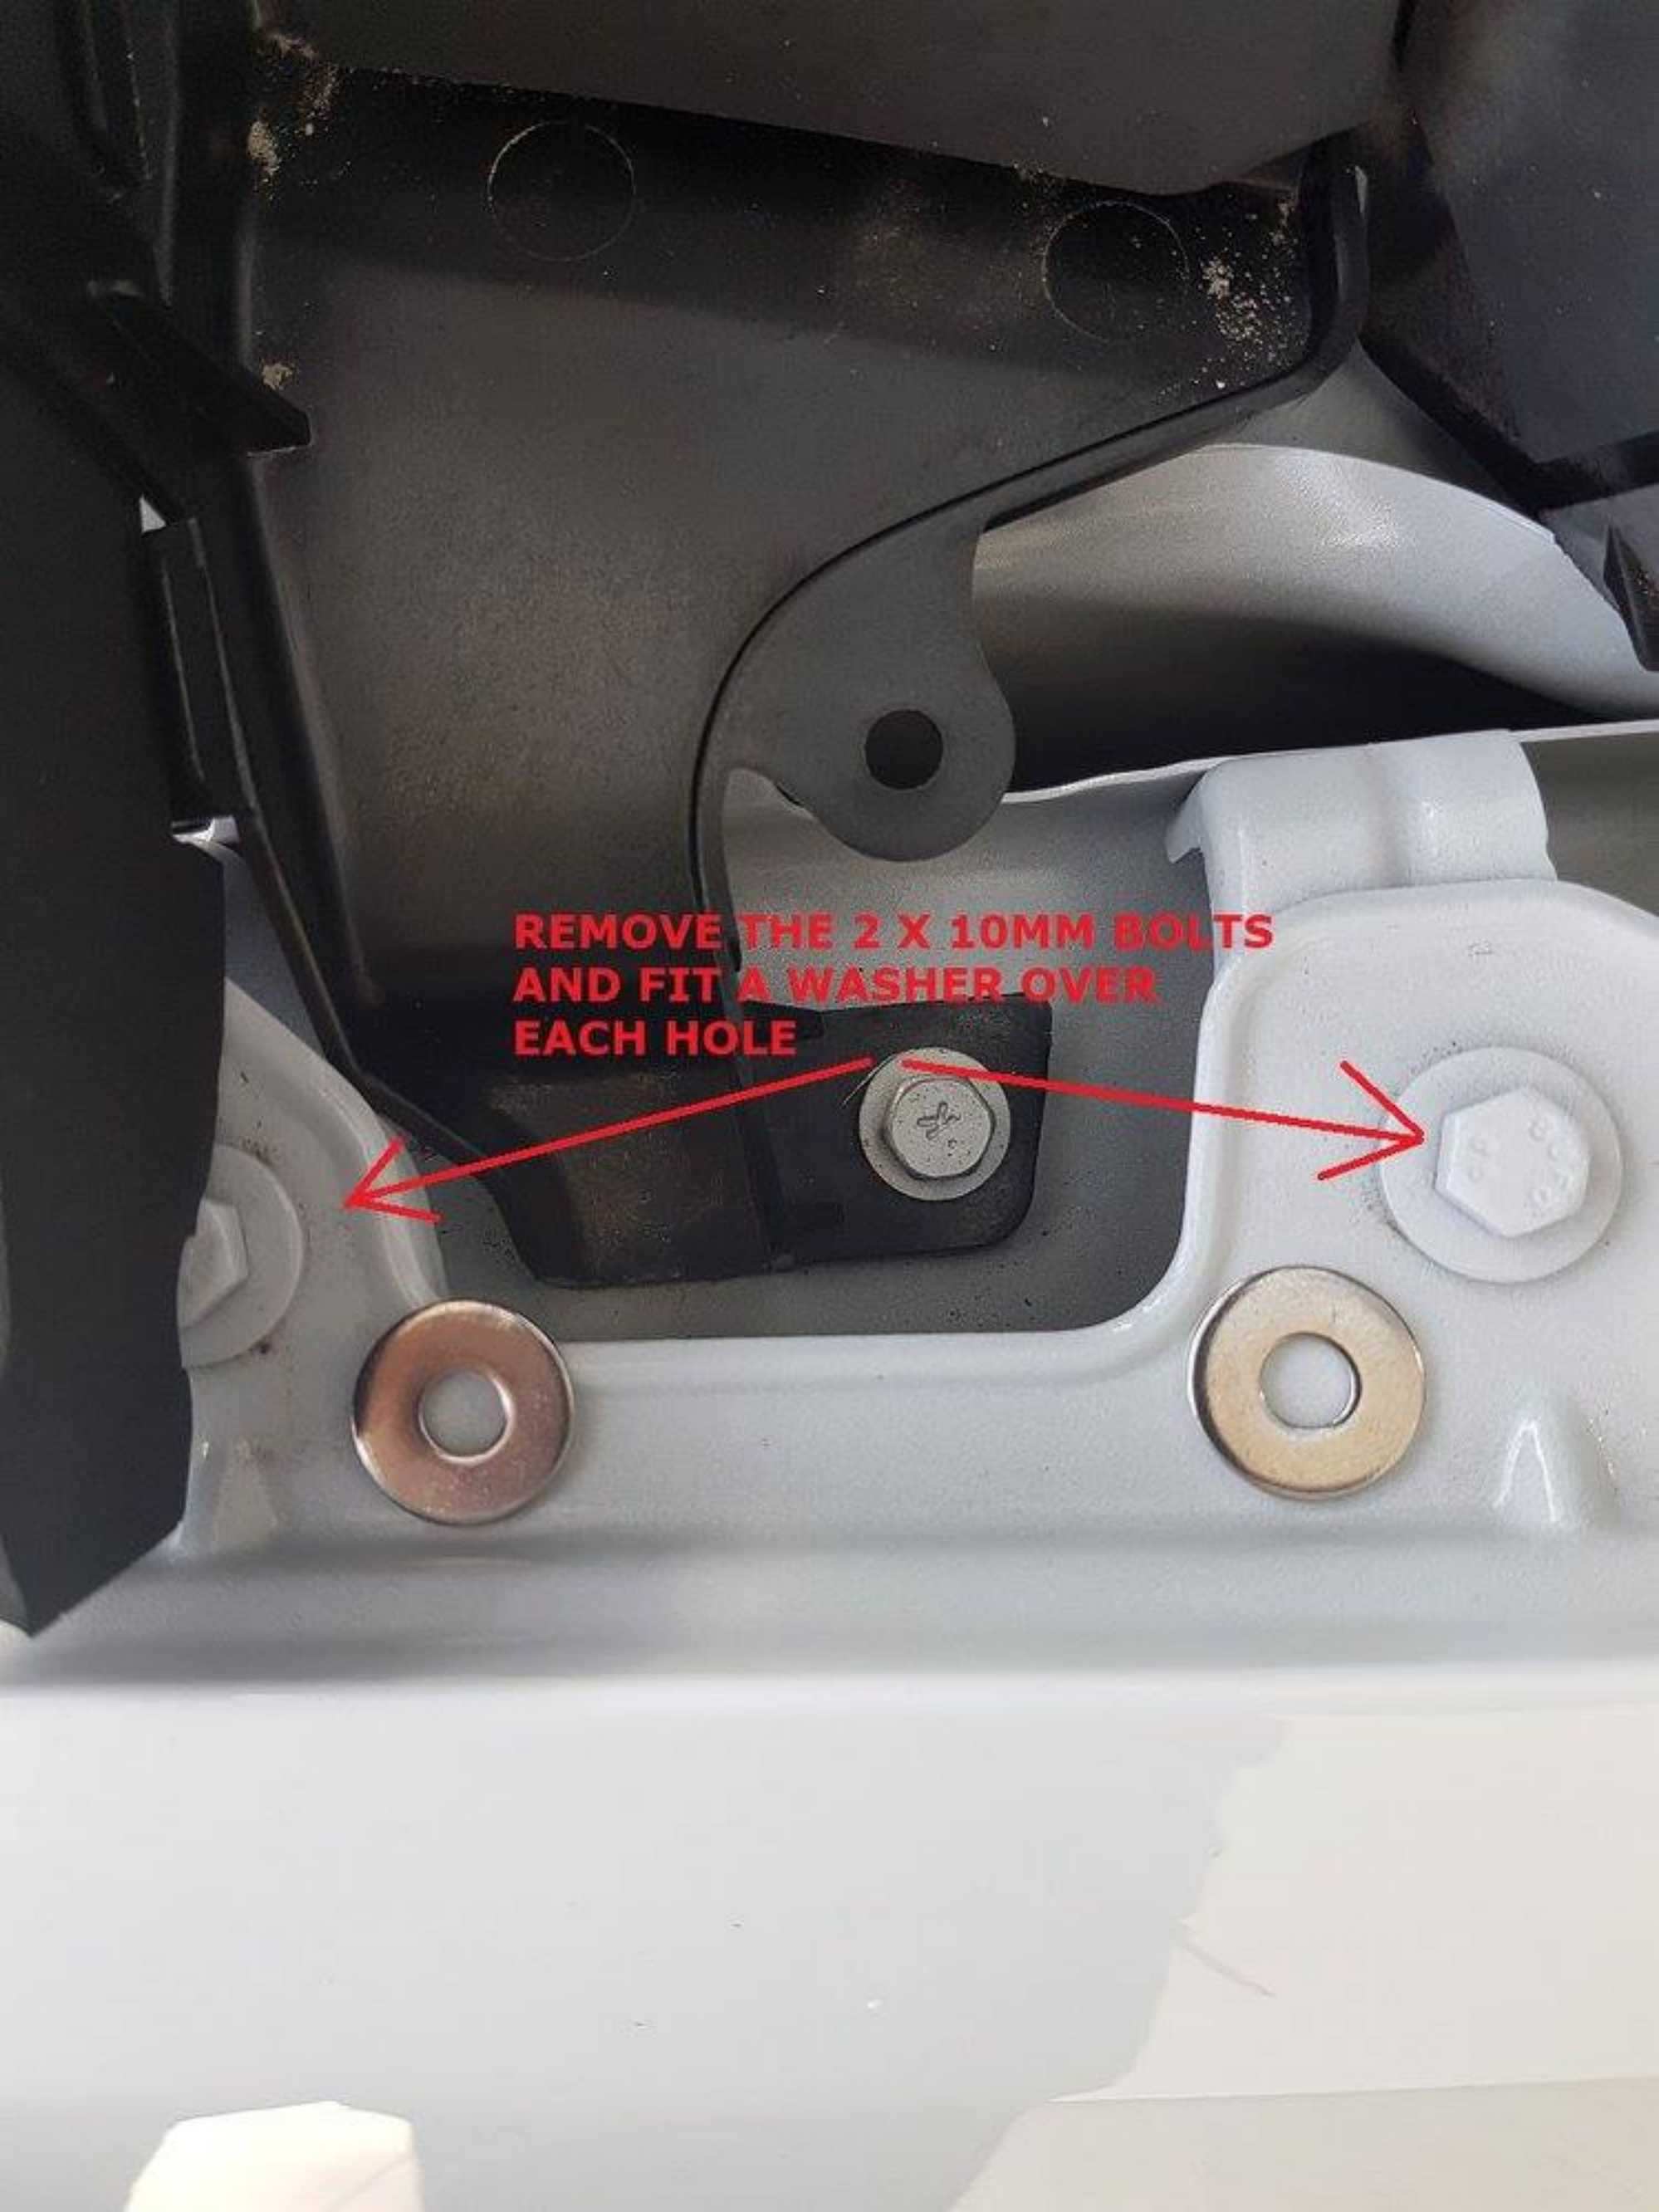





**FIT N/S BRACKET OVER  
WASHERS AND BOLT HOLES**





**FIT NEW 10MM  
BOLTS WITH  
WASHER  
THROUGH  
BRACKET AND  
UNDER WASHER  
INTO WING AND  
TIGHTEN**





**INSERT 10MM STUD AS  
SHOWN. WASHER AND  
LOCKNUT TO INSIDE OF  
HINGE**







**AS BEFORE REMOVE O/S  
10MM BOLTS AND FIT  
WASHERS OVER HOLES**



**FIT O/S  
BRACKET AS  
SHOWN OVER  
UNDER  
WASHERS  
AND OVER  
BOLT HOLES.**



**FIT NEW  
BOLTS AS  
BEFORE AND**





**REMOVE  
WASHER HOSE  
CLIP FROM  
HINGE HOLE.  
SLIDE CLIP  
UPWARDS  
APPROX 15MM**



A close-up photograph of a mechanical hinge assembly. A black metal rod is connected to a white plastic hinge component. A red arrow points to a small black washer clip extender attached to the rod. The background shows a white plastic structure with a black oval hole.

**FIT 10MM STUD  
AS SHOWN .**

**WASHER CLIP  
EXTENDER AND  
LOCKNUT ON  
INSIDE OF  
HINGE**



**REFIT WASHER JET  
HOSE CLIP INTO  
EXTENDER HOLE**

**LIFT BONNET OFF  
ORIGINAL PROP.  
SUPPORT BONNET  
WHILE STRUTS ARE  
FITTED.**

**STRUTS SIMPLY  
PUSH ON OVER  
STUDS.**

**THICK END (STRUT  
BODY) MUST GO  
ONTO BONNET  
STUD. THIN END  
(ROD END) MUST GO  
TO WING BRACKET  
STUD**

